Oscar Sofa Bed

Assembly Instructions

Two people are required for safe assembly.

Opening Boxes

16

17

DO NOT use a knife to open the King Living boxes as you may damage your furniture. Peel off the tape, then lift & separate the cardboard flaps to open. Assemble your furniture by following the steps below.

5 2 3 4 x4 6 7 8 9 10 14 **11** Line up receivers in 12 13 15 arm with inserted arm brackets, push down.


18

 
19 Locking Modules


together.


20



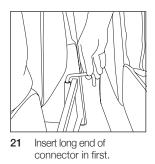



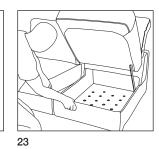


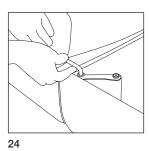










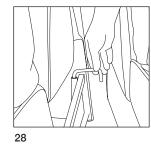


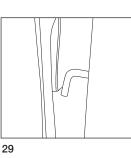


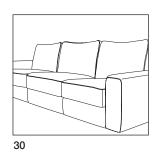


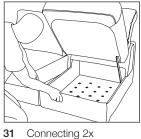


 Connecting 2x Module with Swivel table connector.




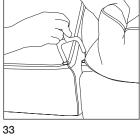


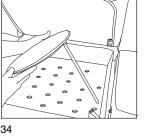


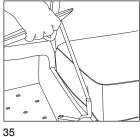




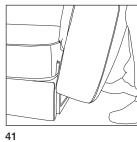


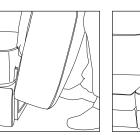

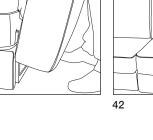


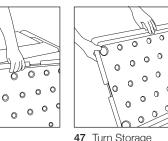




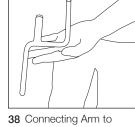


38 Connecting Arm to Module with Swivel table connector.

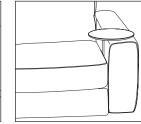

-Tur

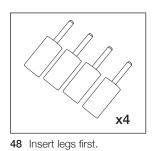





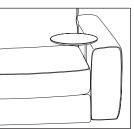

45 Storage bin assembly.

 
o

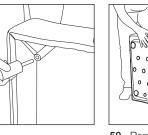





C


50 Replace storage base plate.

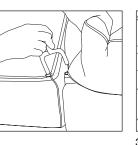

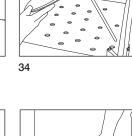




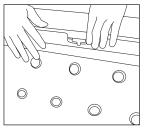

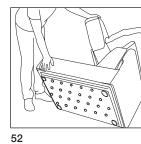






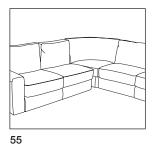



51 Click Storage bin into place.


56

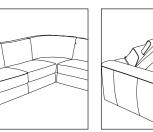

57 Setting up Oscar Sofa Bed.

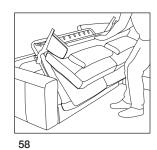

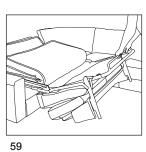

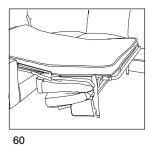

61 Connect wire from Recliner Module to Transformer, then plug into wall.



Warning

Important: Read the below instructions carefully before assembling and using this product.

- Do not allow children to play with or on the unit or allow children to use the unit unsupervised. Serious injury or death could occur if head or body parts are trapped within or under the unit while it is being operated.
- Ensure children and pets are at a safe distance from the unit when operating the electric mechanism / moving parts.
- Keep hands and feet clear of moving parts at all times.
- Each unit should be operated only by the person sitting on it.
- Only use the electronic mechanism to operate the unit. Do not attempt to open the footrest by pulling on it.
- Always leave the unit in an upright and closed position when not in use to avoid children and pets crawling into any open cavities and becoming trapped under moving parts.
- Always disconnect the electrical cord attached to the unit from power before cleaning or moving the unit or when not in use for an extended period.

- Ensure the unit is clear of walls, furniture and other obstructions that may interfere with a clear path for operation. Ensure that no objects are left under the unit to avoid interference with the internal mechanisms.
- Do not use the unit if it is wet, in water, or around water or any liquid. Keep liquids away from unit. If liquids are spilled on the unit, disconnect from power immediately and wait until the spill is completely dry before reconnecting to power. Do not handle the plug or electric controls with wet hands.
- This product is for indoor residential use only.
- Use only a slightly damp cloth to clean metal parts of the mechanism. Before cleaning ensure the furniture has been disconnected from its power source.
- Ensure electrical wires are free from obstruction and not twisted or trapped. If any wires are damaged, turn off power supply and contact King Living Customer Care.
- Do not attempt to disassemble or service the internal mechanism, motor or other parts. No customer serviceable parts inside.

Dual Universal USB Charger

Warning

- The King Furniture USB Charger (Charger) must only be used with the Power Supply provided (29 VDC, 3 Amps).
 Third party power supplies could damage the Charger or device being charged or provide inadequate charging.
- Charger is not to be used by children.
- Do not allow Charger to come into contact with liquids or use the Charger if it is wet.
- Do not operate Charger with wet hands. If liquids are spilled on the Charger, disconnect from Power Supply immediately and do not reconnect the Power Supply until dry. If in doubt contact King Living Customer Care for assistance.
- Charger is for indoor residential use only.
- Do not attempt to disassemble or service the Charger. Contact King Living Customer Care for service issues and assistance.

Information

- The Charger can be used for a range of devices including tablets, mobile phones and portable digital music players. If in doubt about a particular device contact King Living Customer Care for assistance.
- When you connect your device, the Charger will identify the device and establish an appropriate charging rate. This process may take several minutes (and may be prolonged if device battery is flat) during which time the device may or may not appear to be charging.
- The Charger may hum or warm slightly when in use.